



COVERED SAND BOX


STEP 1 - PLACE THE SAND BOX BOARDS FLUSH WITH THE BOTTOM OF THE CORNER UPRIGHTS, FASTEN THE SAND BOX BOARDS TO THE CORNER UPRIGHTS WITH 3 1/2 " LAG SCREWS W/ WASHERS.

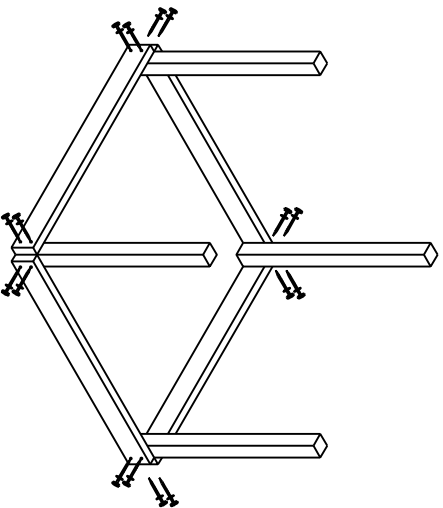


STEP 2 - PLACE THE CENTER UPRIGHTS FLUSH WITH THE BOTTOM OF THE FRONT AND BACK SAND BOX BOARDS, AT CENTER. FASTEN THE CENTER UPRIGHTS TO THE SAND BOX BOARDS WITH 3 1/2 " LAG SCREWS W/ WASHERS.

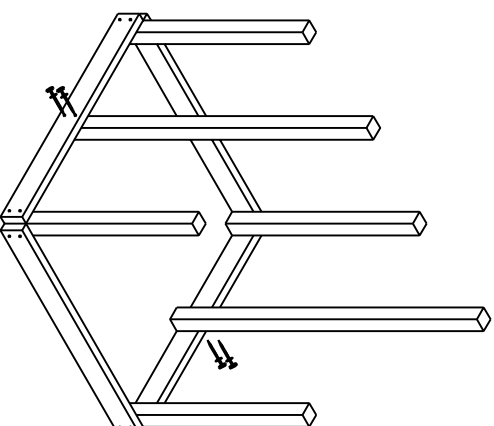

STEP 3 - PLACE THE REMAINING SAND BOX BOARDS FLUSH TO THE CORNER UPRIGHTS, FLUSH ON TOP OF THE EXISTING SAND BOX BOARDS. FASTEN THE SAND BOX BOARDS TO THE CORNER UPRIGHTS WITH 3 1/2 " LAG SCREWS W/ WASHERS.

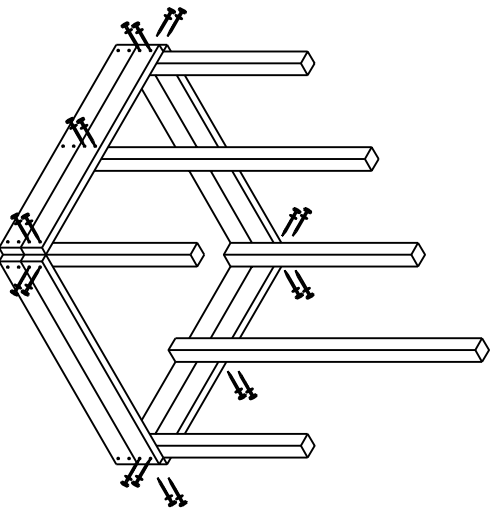


STEP 4 - PLACE THE TOP PANEL BOARDS FLUSH TO THE TOP OF THE CORNER UPRIGHTS. FASTEN THE TOP PANEL BOARDS TO THE CORNER UPRIGHTS WITH 3 1/2 " LAG SCREWS W/ WASHERS.

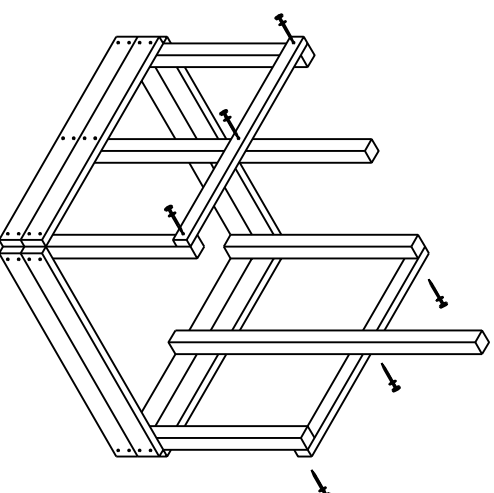


COVERED SAND BOX


STEP 5 - PLACE THE BENCH SEATS CADDY CORNER ON TOP OF THE TOP SAND BOX BOARDS, PLACE THE BENCH SEATS FLUSH WITH THE EDGES OF THE TOP SAND BOX BOARDS, FASTEN THE BENCH SEATS TO THE TOP SAND BOX BOARDS WITH WOOD SCREWS.

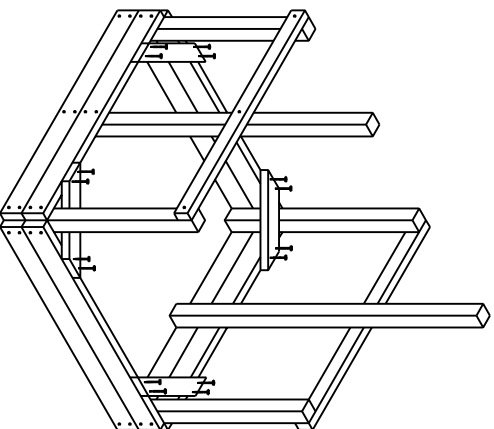

STEP 7 - PLACE THE CENTER TARP BOARD FLUSH ON TOP OF THE CENTER UPRIGHTS, FASTEN THE CENTER TARP BOARD TO THE CENTER UPRIGHTS WITH 3 1/2" LAG SCREWS W/ WASHERS.

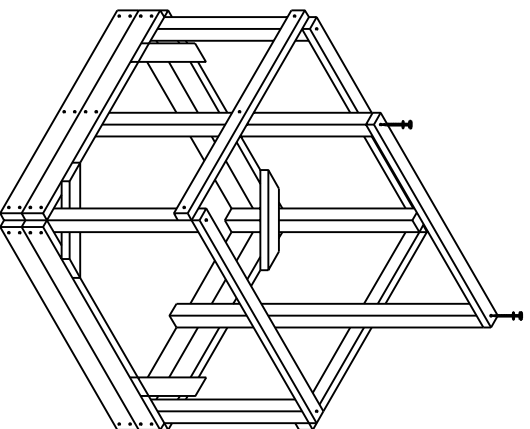

STEP 6 - PLACE THE CORNER TARP BOARDS FLUSH ON TOP OF THE CORNER UPRIGHTS, FASTEN THE CORNER TARP BOARDS TO THE CORNER UPRIGHTS WITH 3 1/2" LAG SCREWS W/ WASHERS.

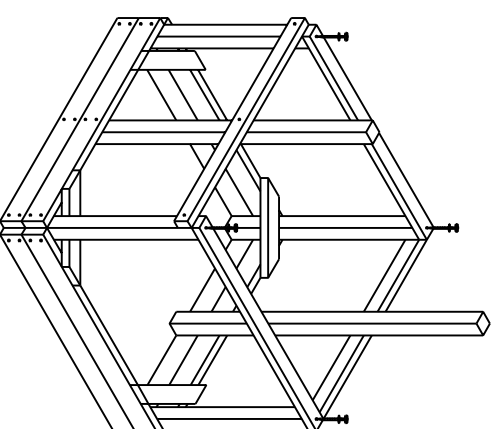

STEP 8 - FASTEN THE TARP SNAPS TO THE BOTTOM OF THE CORNER TARP BOARDS WITH WOOD SCREWS, PLACE THE TARP OVER THE CORNER AND CENTER TARP BOARDS, ATTACH THE SNAPS ON THE BOTTOM OF THE CORNER TARP BOARDS TO THE SNAPS ON THE TARP.

